


INSTALLATION GUIDE ACOUSTIC DIVIDER WITH NOISEBLOCKER / NOISESILENCER

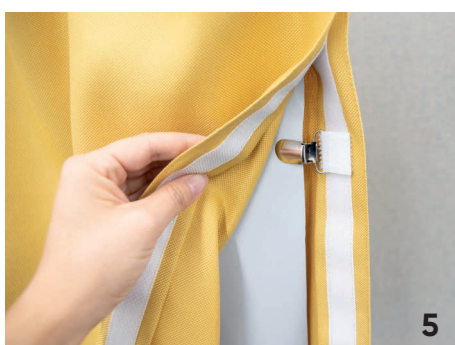

Installation of inner layers

The rollers are connected to the NoiseBlocker or NoiseSilencer inner layers by means of stainless steel cable ties. Insert the inner layers with the rollers into the rail.

NoiseBlocker:

Always mount the NoiseBlocker panels with one eyelet overlapping. Do not insert the last roller of the first panel until after the first roller of the second panel (1). Always start with the whole panels, add narrower or half panels at the end. In this way, the width is considered with overlap and the panels are connected for moving and for the acoustic effect.

NoiseSilencer:


Number of eyelets are identical with number of hooks of the outer fabrics, no overlap.

Installation of outer fabrics

Once the inner layers of NoiseBlocker or NoiseSilencer are mounted, the outer fabric can be hooked above the eyelets into the perforated bars directly at the roll-glider (2).

Only use one hook on the overlapping panels of the NoiseBlocker, simply leave out the overlapped one (3).

For a confection with pleats, please hang up two hooks into the perforated bars (4).

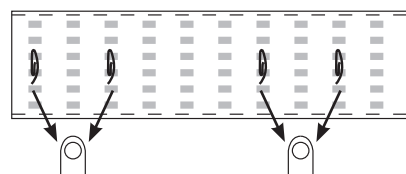

After mounting the outer fabric layers, the final sides of the NoiseBlocker or NoiseSilencer can be fitted with the clips at the top, middle and bottom and finally closed smoothly and flush in the Velcro flap with a little tension (5).